 




9 Current flow diagram, Type 911 SC, USA, Model 78

Description	Current track
E - Windshield wiper switch	39
E ¹ - Headlight switch	6, 8, 9, 11, 15, 20
E ² - Turn signal switch	28
E ³ - Emergency flasher switch	24, 25, 28, 31, 34
E ⁴ - Dimmer switch	6, 39
E ⁵ - Headlight flasher switch	4
E ⁹ - Fresh air blower switch	58, 59, 60
E ¹⁵ - Rear window defogger switch	53, 54
E ¹⁹ - Parking light switch	13
E ²⁰ - Instrument panel illumination potentiometer	20
E ²⁶ - Switch for glove compartment light	41
F - Stop light switch	50, 52
F ² - Left door switch	45
F ³ - Right door switch	46
F ⁴ - Back-up light switch	48
F ⁵ - Switch for luggage compartment light	42
H - Horn switch	39
H ² - Horns	36, 38
H ⁶ - Key warning buzzer contact	43
J ¹ - Hazard / turn signal flasher	33, 34, 35
J ⁴ - Horn relay	36, 37
J ⁹ - Rear window defogger relay	54, 55
J ²⁷ - Diode for seat belt warning system	46
K ¹ - High beam indicator light	2
K ⁴ - Parking lights indicator light	1
K ⁵ - Turn signal indicator light	27, 29
K ⁶ - Hazard flasher indicator light	24
K ⁸ - Blower indicator light	60
K ¹⁰ - Rear window defogger indicator light	53
L ¹ - Sealed beam unit, left headlight	3, 7
L ² - Sealed beam unit, right headlight	4, 8
L ⁶ - Speedometer illumination light	22
L ⁷ - Fuel gauge illumination light	22
L ⁸ - Clock illumination light	22
L ¹⁵ - Ashtray illumination light	20
L ¹⁶ - Heater control assembly illumination light	19
L ²¹ - Temperature control lever illumination light	21
L ²⁴ - Oil temperature indicator illumination light	22
L ²⁶ - Tachometer illumination light	22
L ²⁷ - Oil pressure indicator illumination light	22
M ² - Right stop / rear light	17, 50
M ⁴ - Left stop / rear light	13, 51
M ⁵ - Left front turn signal / parking light	11, 25
M ⁶ - Left rear turn signal	26
M ⁷ - Right front turn signal / parking light	15, 31
M ⁸ - Right rear turn signal	30
M ¹¹ - Front side marker light	12, 16
M ¹² - Rear side marker light	14, 18
M ¹⁶ - Left back-up light	48
M ¹⁷ - Right back-up light	49
N ⁶ - Resistor	23
S ²	9, 15, 11
to - Fuses	8, 7, 4
S ¹² on the	3, 31, 25, 48, 53
S ¹⁵	60
S ¹⁷	34
S ¹⁸ fuse box	40
S ²⁴ - Fuse on the rear fuse box	55
T ¹ - Cable connector, single	
a - near regulator panel	14, 54, 55, 56
b - behind sealed beam unit, left	11, 25
c - behind sealed beam unit, right	15, 31
d - behind fuse box	37
e - on luggage compartment floor	22, 42, 44, 45, 46, 51
f - behind instrument panel	6, 22, 24, 28, 56
T ^{2d} - Cable connector, double, on luggage compartment floor	50
T ⁶ - Cable connector, sixfold	
a - in the engine compartment, rear left	9, 17, 30, 49, 50
b - in the engine compartment, rear right	10, 24, 26, 48, 51
d - below instrument panel	4, 6, 26, 30, 39
e - below instrument panel	25, 31, 32, 34
g - below instrument panel	8, 9, 11, 15, 22
h - below instrument panel	41, 58, 59, 60
T ¹⁴ - Cable connector, fourteenfold on regulator panel	48
U ¹ - Cigar lighter	61
V ² - Blower motor	58, 59
W - Interior light	45, 46
W ³ - Luggage compartment light	42
W ⁶ - Glove compartment light	41
X - License plate light	9, 10
Y - Clock	40
Z ¹ - Rear window defogger	55

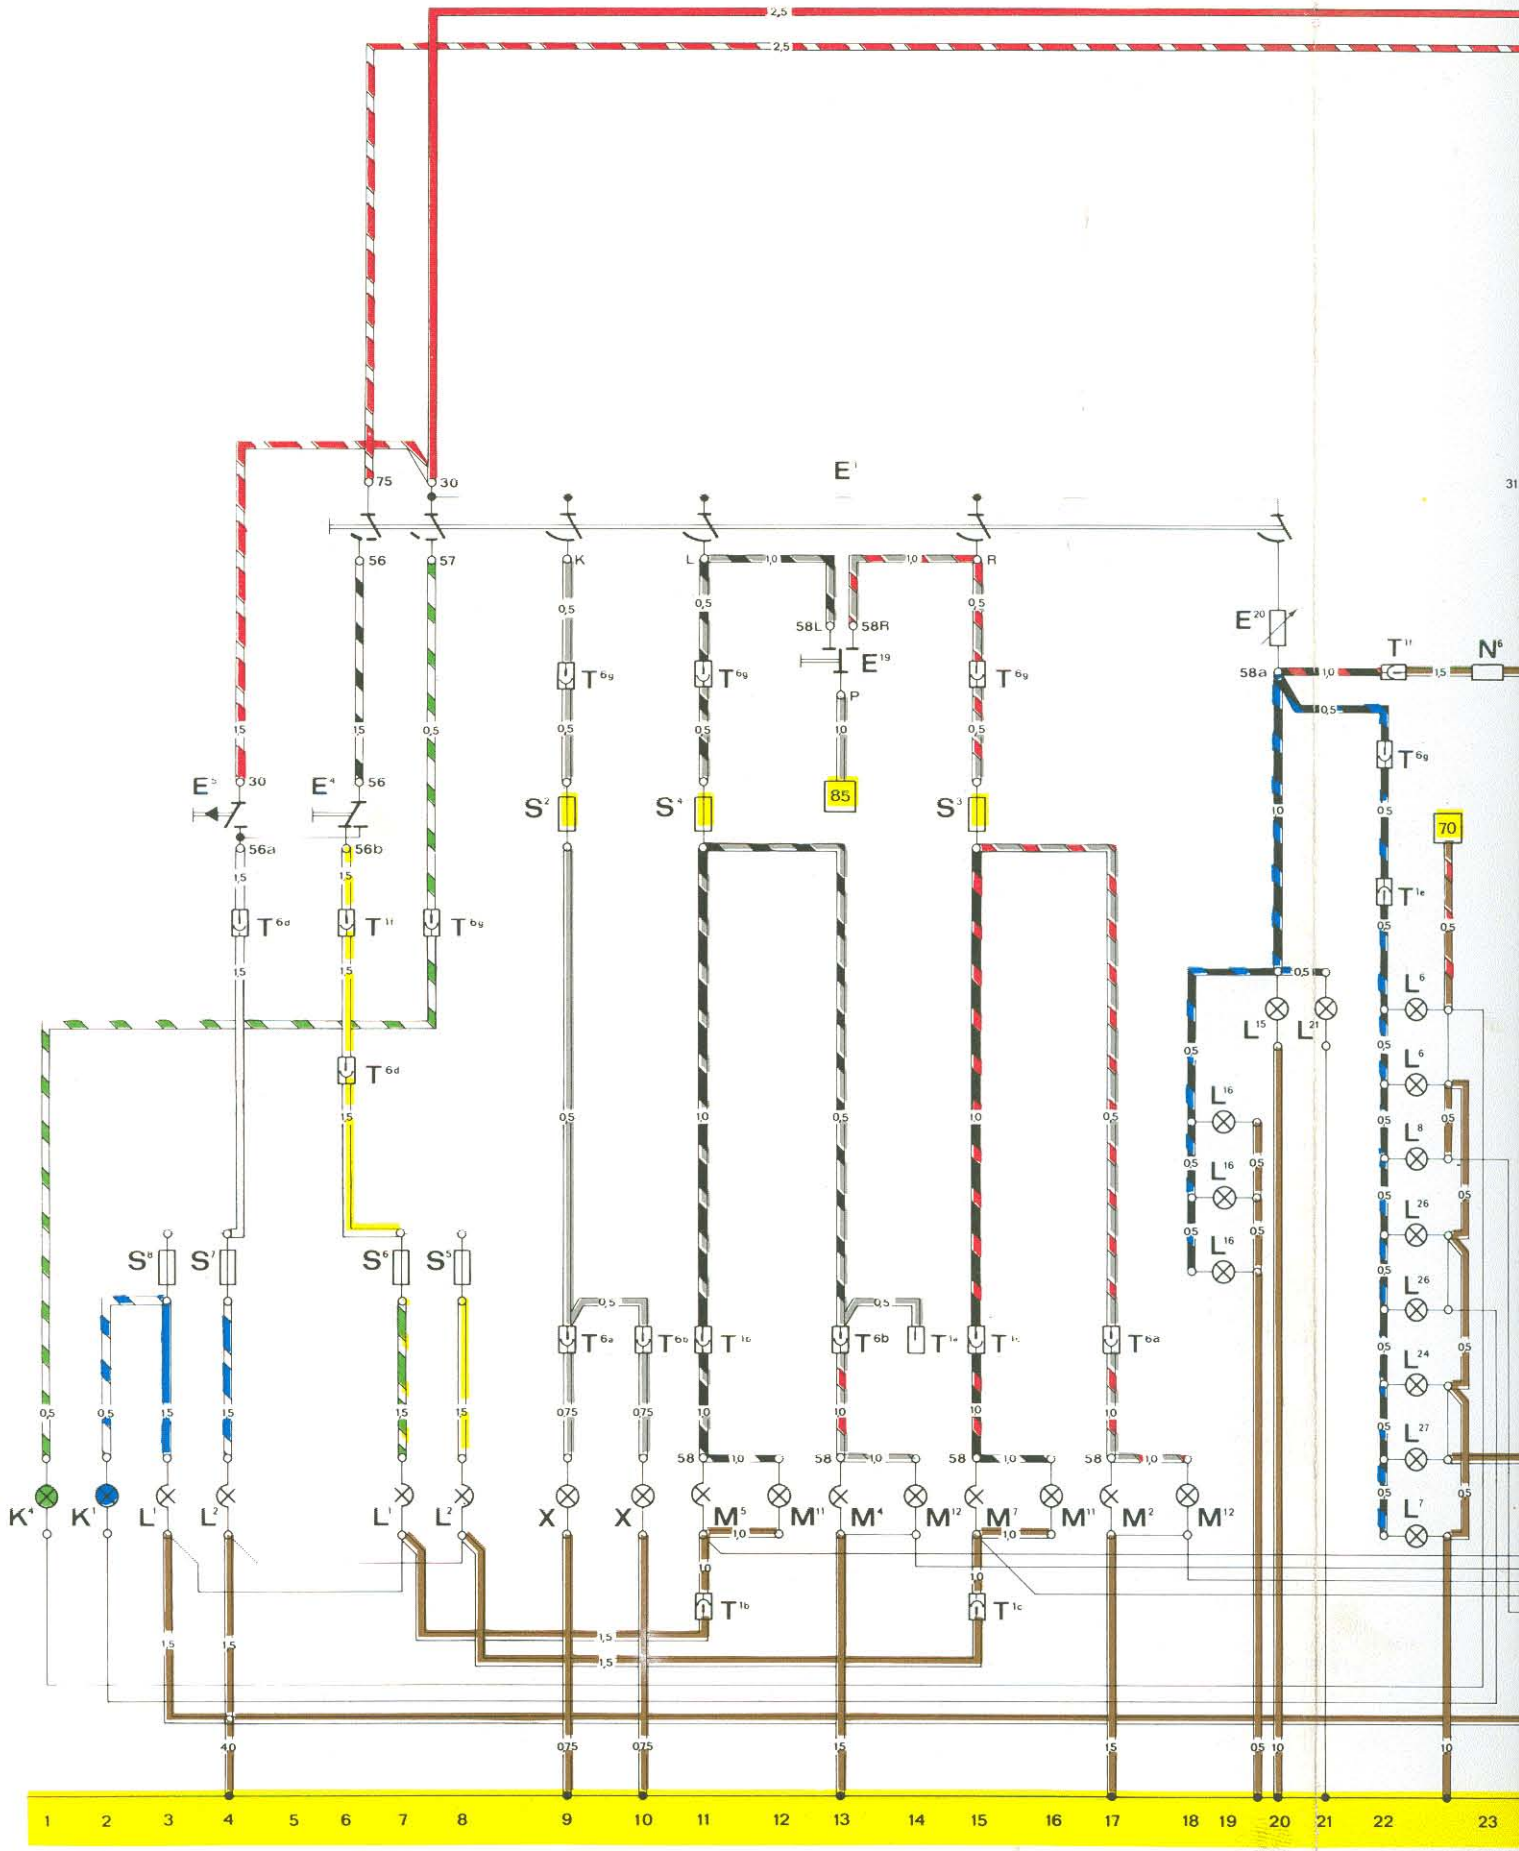

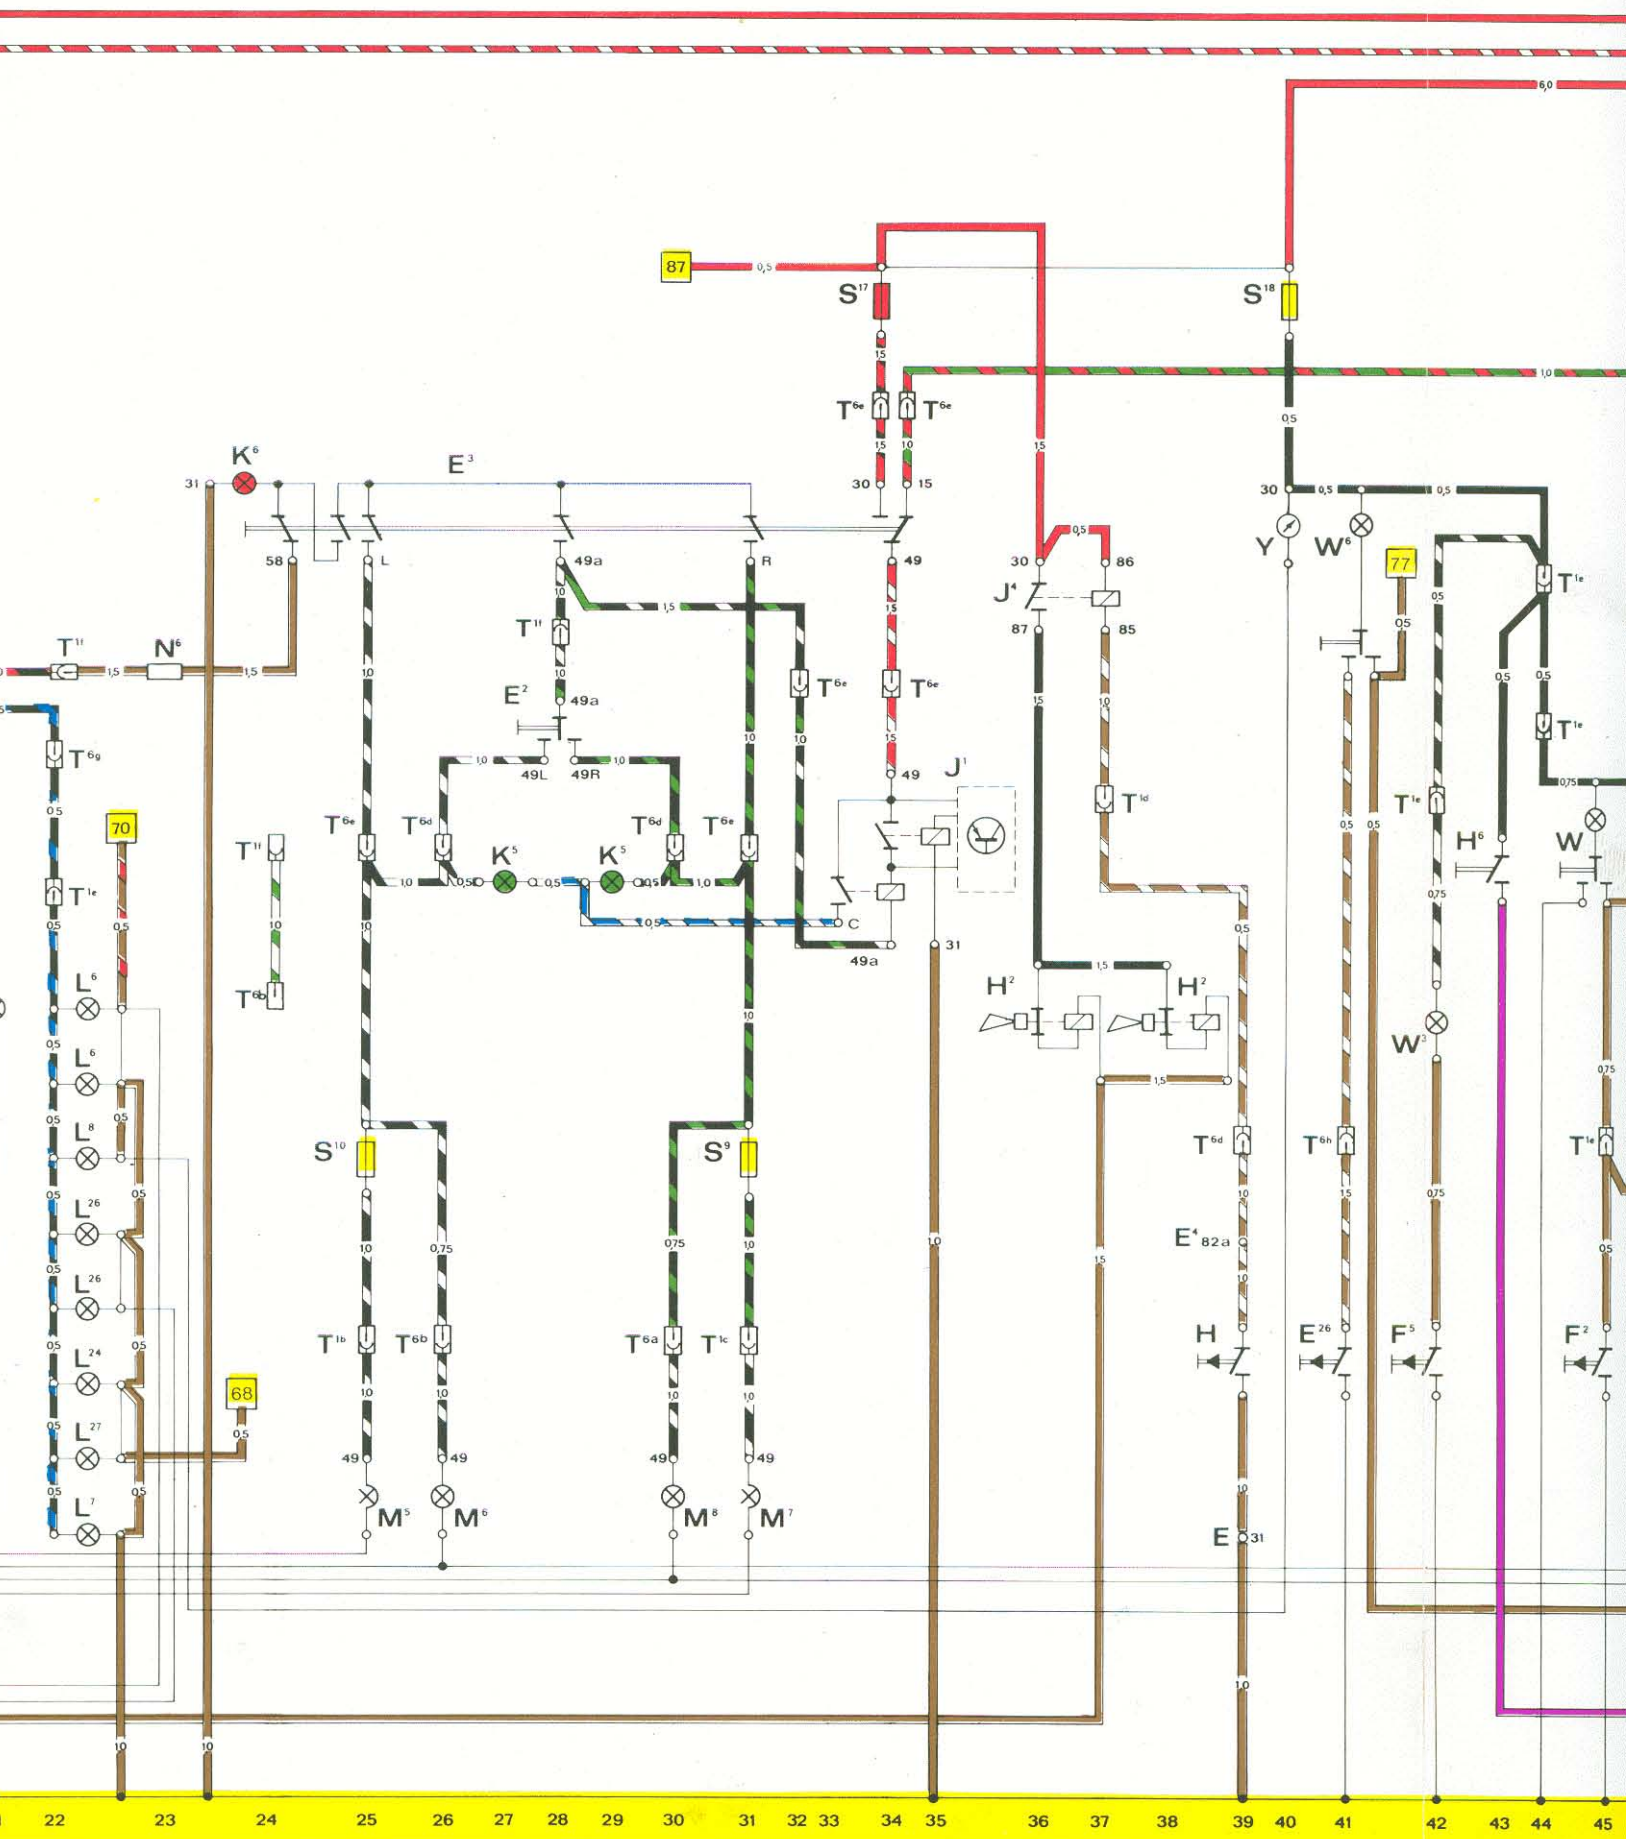

Current flow diagram, Type 911 SC, USA, Model 78 **9**

Description	Current track
A - Battery	116
B - Starter	113, 114
C - Generator	97 - 102
C ² - Voltage regulator	98, 99
D - Ignition / starter switch	83 - 88
E - Windshield wiper switch	72 - 80
E ¹⁶ - Heater blower switch	109
E ²⁴ - Left seat belt switch	84
E ³⁸ - Potentiometer for intermittent wiper operation	78, 79
E ⁴³ - Outside mirror control switch	66, 67, 68
F ¹ - Oil pressure switch	95
F ⁹ - Parking brake switch	85
F ²⁶ - Thermo-switch for cold start valve	110
G - Fuel sender unit	91
G ¹ - Fuel gauge	92
G ⁵ - Tachometer	94
G ⁶ - Fuel pump	106
G ⁸ - Oil temperature sender unit	93
G ⁹ - Oil temperature indicator	93
G ¹⁰ - Oil pressure sender unit	96
G ¹¹ - Oil pressure indicator	94
G ¹² - Oil level sender unit	89
G ¹³ - Oil level gauge	89
G ¹⁹ - Air meter contact	105
G ²¹ - Speedometer	70
G ²² - Speedometer sensor	70
J ¹⁴ - Relay for heater blower	108, 109
J ¹⁶ - Relay for fuel pump	105, 106
J ³¹ - Relay for intermittent wiper operation	75 - 78
J ³⁴ - Seat belt warning system relay with integrated buzzer	81 - 88
J ³⁵ - Speed switch	103
K ² - Generator charge indicator light	93
K ³ - Oil pressure indicator light	94
K ⁷ - Parking brake / brake warning light	85
K ¹⁶ - Low fuel warning light	90
K ¹⁹ - Seat belt warning light	85
N - Ignition transformer	118
N ⁹ - Warm-up regulator	103
N ¹⁵ - High tension ignition unit	118
N ¹⁷ - Cold start valve	111
N ²¹ - Supplementary air valve	104
N ³⁵ - Magnetic clutch for mirror control	68
N ⁴³ - Thermovalve	104
O - Distributor	119 - 125
P - Spark plug connector	120 - 125
Q - Spark plug	120 - 125
S ¹³ - Fuses	72
S ¹⁴ - on the	66
S ¹⁶ - fuse box	106
S ²² - Fuses on the	126
S ²³ - rear fuse box (regulator panel)	108
T ¹ - Cable connector, single	
a - near regulator panel	105, 109
d - behind fuse box	80, 103
e - on luggage compartment floor	88, 127
f - behind instrument panel	85, 86
g - below shift lever housing	126
h - near battery	84
T ² - Cable connector, double	
a - below regulator panel	105, 126
b - in engine compartment, left	101, 108
c - near left seat	84
d - on luggage compartment floor	85
e - near distributor	119, 120
i - in tunnel, rear	70
k - below regulator panel	105, 106
T ⁴ - Cable connector, quadruple, on luggage compartment floor	65, 66, 67
T ⁶ - Cable connector, sixfold	
a - in engine compartment, right	89
c - below instrument panel	72, 73, 74, 76, 80
f - below instrument panel	81, 82, 87, 115, 116
T ¹⁴ - Cable connector, fourteenfold on regulator panel	93, 95, 96, 102, 103, 108, 113, 117, 126, 127
V - Windshield wiper motor	72, 75
V ⁴ - Heater blower	108
V ⁵ - Washer pump	80
V ¹⁷ - Outside mirror control motor	66
Z ⁴ - Outside mirror defogger	65